

WARRANTY

LIMITED ONE-YEAR WARRANTY FOR DISPLAY

LIMITED 90-DAY WARRANTY FOR GRAPHICS

Vita-Mix® Corporation will repair or replace this product with new or rebuilt parts, free of charge, in the USA, Puerto Rico and Canada, in the event of a defect in materials or workmanship for a period of one year from the date of purchase for the display and 90 days for the graphics. This warranty does not cover damage which occurs from shipment, accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustments, improper maintenance, alterations, modifications, tampering, negligence, lack of reasonable care, water power, acts of God, or repair or service by anyone other than a service facility authorized by Vita-Mix. Replacement graphics, ice bin, base, hardware, fasteners are available at a reasonable cost. Vita-Mix Corporation shall not be liable for the loss of use of the product, inconvenience, loss or any other damages, whether direct, incidental, or consequential including, without limitation, damage to other equipment resulting from the use of this product, or arising out of any breach of this warranty. In the event your Vita-Mix product needs service or repair covered by the terms of this warranty, please call the Vita-Mix Corporation for shipping instructions. The Vita-Mix Blending Kiosk™ must be sent in original or sufficient packaging.

This limited warranty is in lieu of any other warranty expressed or implied. No representative or any other person is authorized to make any other warranty or to assume any liability not strictly in accordance with the foregoing. This limited warranty gives you specific legal rights which may vary from state to state. Proof of purchase may be required to prove date of purchase.

Outside the United States and Canada, other warranties may apply. Call or check with your local Vita-Mix Distributor for details or telephone the Vita-Mix International Division at 1.440.782.2450 or email international@vitamix.com.

In case of shipping damage, notify the shipper or carrier immediately. Outside the United States and Canada, contact your local Vita-Mix Distributor.

SPECIFICATIONS

Overall dimensions of display: 34.5 in. / 87.63 cm High x 26.25 in. / 66.68 cm Wide x 18.25 in. / 46.36 cm Deep

Overall dimensions of ice bin: 11.125 in. / 28.26 cm High x 15.56 in. / 39.52 cm Wide x 7.75 in. / 19.69 cm Deep

Capacity of ice bin: 2.5 gallon / 9.5 Ltr.

Ship weight of display: 25 lbs. / 11.34 kg

Patent #: D508,633



COMMERCIAL CUSTOMER SERVICE:

US, CANADA & LATIN AMERICA

Tel: 800-4DRINK4, 800-437-4654, 440-235-0214; Fax: 440-235-9670

Email: foodservice@vitamix.com; www.vitamix.com/foodservice

ALL OTHER COUNTRIES contact your local Vita-Mix Distributor

or telephone: +1.440.782.2450; Fax: +1.440.782.2220

Email: international@vitamix.com; www.vitamix.com/foodservice



VITA-MIX® CORPORATION

 
8615 Usher Road, Cleveland, Ohio 44138-2103 USA

FOODSERVICE

©2006 Vita-Mix Corporation. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopy, recording or any information storage and retrieval system without the written permission of the Vita-Mix Corporation.

BLENDING KIOSK™

Vita-Mix® Point-of-Purchase Display Kit

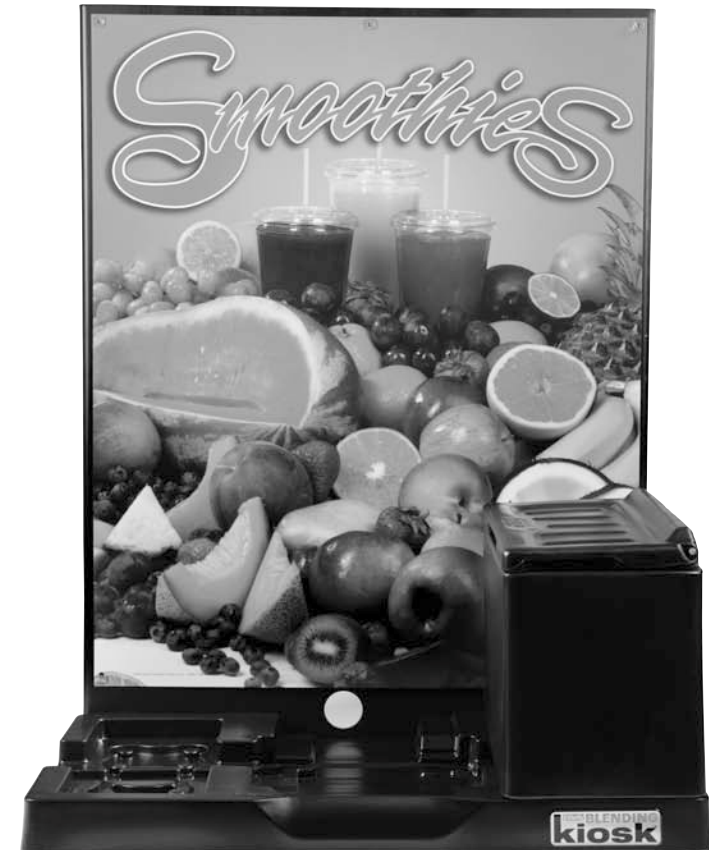

The Vita-Mix® Blending Kiosk™ is the perfect point-of-purchase display to help increase frozen drink sales and profits. The insulated foam core display keeps your Vita-Mix machine, ice and extra containers together to save counter space and increase service speed. Two-sided graphics feature smoothies or frozen coffee for attractive and colorful signage.



ASSEMBLY INSTRUCTIONS

1. Lay Back Panel on flat surface with flanges facing down. Place two-sided Graphics Panel, with desired graphics facing up, on top of Panel so that the screw holes align (see Fig. 1).
2. Unsnap the five (5) graphics fasteners (see Fig. 2) included with the Graphics Panel and separate the plastic nuts from the screws. Insert the screws into the five holes to secure the Graphics Panel to the Back Panel (see Fig. 1). Hand-tighten each fastener from the back with the plastic nuts until the Graphics Panel is securely attached to the Back Panel. Set Back Panel with attached Graphics aside.

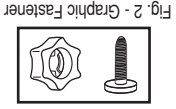


Fig. 2 - Graphic Fastener

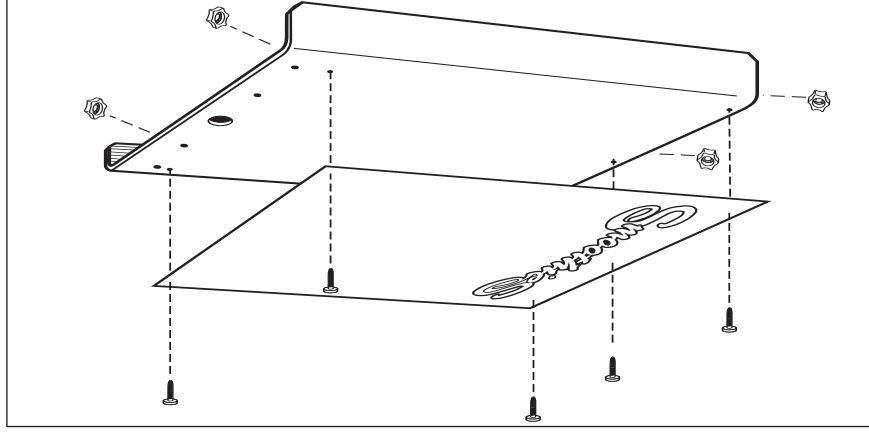


Figure 1

3. Place Base on flat surface. Make sure all eight (8) rubber feet are securely in position so the Base is level.
4. Place the Back Panel against the back of the Base while aligning with the screw holes as shown in Fig. 3. (The Panel should be mounted flush with the countertop.) Insert the screws and washers from the backside of the Back Panel and hand-tighten until Panel is securely attached to the Base.
5. Position display in desired location. Make sure display is on a flat surface and within 6 feet / 1.8 m of a grounded outlet so the machine can be powered when in use.
6. Place a Vita-Mix® Blending Station® or Drink Machine/BarBoss in the center cavity of the Base and insert machine power cord through circular opening in the Back Panel (see Fig. 3). Follow the machine's manual for normal operation. **Note: Use only Vita-Mix approved equipment in the display.**
7. Place the Ice Bin on either side of the machine making sure it fits flat into the side cavity. Position so the lid opens away from the machine as shown in Fig. 4. Place extra containers (sold separately) or an additional Ice Bin (sold separately) in the remaining side cavity.

CAUTION: Make sure Vita-Mix machine sits flat in Base. The back feet of the machine should engage in the appropriate protrusions in the Base bottom and the machine should be pushed as far forward as possible (see Fig. 5).

ASSEMBLY INSTRUCTIONS

1. Lay Back Panel on flat surface with flanges facing down. Place two-sided Graphics Panel, with desired graphics facing up, on top of Panel so that the screw holes align (see Fig. 1).
2. Unsnap the five (5) graphics fasteners (see Fig. 2) included with the Graphics Panel and separate the plastic nuts from the screws. Insert the screws into the five holes to secure the Graphics Panel to the Back Panel (see Fig. 1). Hand-tighten each fastener from the back with the plastic nuts until the Graphics Panel is securely attached to the Back Panel. Set Back Panel with attached Graphics aside.

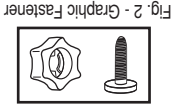 


Fig. 2 - Graphic Fastener

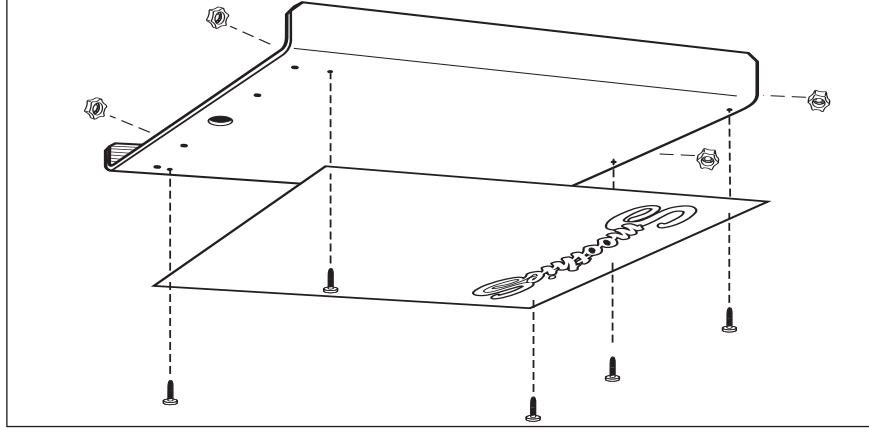 


Figure 1

3. Place Base on flat surface. Make sure all eight (8) rubber feet are securely in position so the Base is level.
4. Place the Back Panel against the back of the Base while aligning with the screw holes as shown in Fig. 3. (The Panel should be mounted flush with the countertop.) Insert the screws and washers from the backside of the Back Panel and hand-tighten until Panel is securely attached to the Base.
5. Position display in desired location. Make sure display is on a flat surface and within 6 feet / 1.8 m of a grounded outlet so the machine can be powered when in use.
6. Place a Vita-Mix® Blending Station® or Drink Machine/BarBoss in the center cavity of the Base and insert machine power cord through circular opening in the Back Panel (see Fig. 3). Follow the machine's manual for normal operation. **Note: Use only Vita-Mix approved equipment in the display.**
7. Place the Ice Bin on either side of the machine making sure it fits flat into the side cavity. Position so the lid opens away from the machine as shown in Fig. 4. Place extra containers (sold separately) or an additional Ice Bin (sold separately) in the remaining side cavity.

CAUTION: Make sure Vita-Mix machine sits flat in Base. The back feet of the machine should engage in the appropriate protrusions in the Base bottom and the machine should be pushed as far forward as possible (see Fig. 5).

CLEANING INSTRUCTIONS*

Base Assembly & Back Panel with Graphics

Gently wash the surface with a damp soft cotton cloth moistened with a mild solution of warm water and nonabrasive dish detergent or nonabrasive liquid spray cleaner. If additional cleaning is necessary, unplug the machine, remove from the base, and disassemble the display. The base can then be placed in a sink for further cleaning. Dry with a soft cotton cloth.

Notes:

- Do not leave the base in water for an extended period of time. Max.: 5 min.
- The graphics panel is made of a water-resistant material but care should be taken to not use excessive water or detergent. Do not submerge or soak in water. Do not use abrasive cleaning agents or concentrated bleach when cleaning. Do not scrub.

Ice Bin

Gently wash the surface with a damp soft cotton cloth moistened with a mild solution of warm water and nonabrasive dish detergent or nonabrasive liquid spray cleaner. If additional cleaning is necessary, remove the hinge pin from the lid by pulling it out carefully. The bin and lid can then be placed separately in a sink for further cleaning and/or sanitizing. Dry with a soft cotton cloth. Reassemble before use. Make sure the hinge pin is securely reattached.

Note: Do not leave the bin or lid in water for an extended period of time. Max.: 5 min.

*Local sanitizing code should be followed for cleaning and sanitizing equipment.

PARTS LIST

ITEM#	PART	Base Assembly with Hardware	Back Panel with Two-Sided Graphics & Fasteners	18011	2.5 Gallon / 9.5 Ltr. Ice Bin	XIN004	Assembly Instructions (Not Shown)
18010							
18012							
18011							

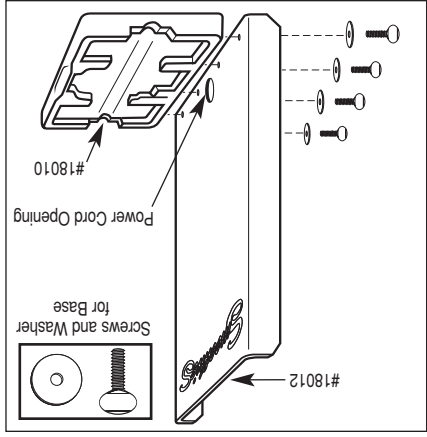 


Figure 3

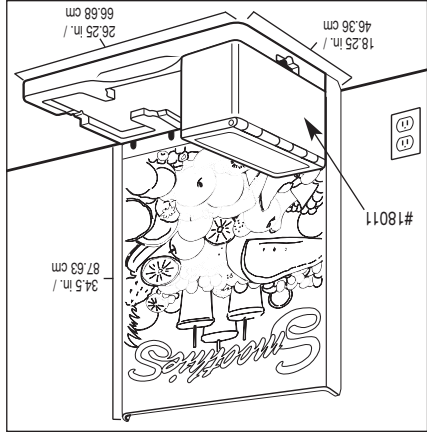 


Figure 4

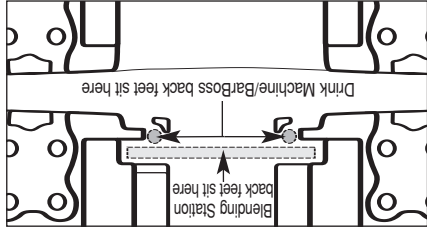 


Figure 5 - Overhead view of Base