



PARTS LISTS

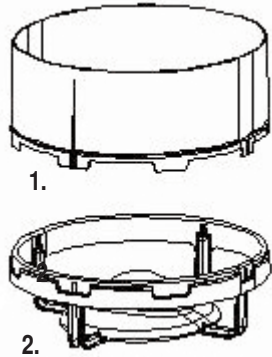

#1574 PBS ICE BIN EXTENSION KIT PARTS LIST:

ITEM NUMBER	PART	QTY
1. PLS547	Ice Bin Extension	1
2. PLS546	Ice Bin Safety Shield	1
3. XPB029	Assembly Instructions (Not Shown)	1

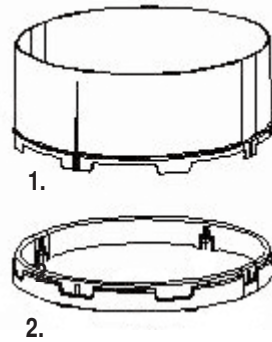

#1576 EXTRA EXTENSION KIT PARTS LIST (OPTIONAL):

*To be used with Ice Bin Extension Kit (#1574)
for additional capacity.*

ITEM NUMBER	PART	QTY
1. PLS547	Ice Bin Extension	1
2. PLS548	Ice Bin Support Ring	1
3. XPB029	Assembly Instructions (Not Shown)	1

SPECIFICATIONS

Additional Height with 1 extension: 6.7 in. / 17 cm

Additional Height with 2 extensions: 13.4 in. / 34 cm

Ship weight: **#1574:** 4.89 lbs. / 2.22 kg • **#1576:** 3.89 lbs. / 1.76 kg



To see the complete line of Vita-Mix products,
visit www.vitamix.com/foodservice

COMMERCIAL CUSTOMER SERVICE:

US, CANADA & LATIN AMERICA

Tel: 800-4DRINK4, 800-437-4654, 440-235-0214; Fax: 440-235-9670

Email: foodservice@vitamix.com; www.vitamix.com/foodservice

ALL OTHER COUNTRIES contact your local Vita-Mix Distributor
or telephone: +1.440.782.2450; Fax: +1.440.782.2220

Email: international@vitamix.com; www.vitamix.com/foodservice



VITA-MIX® CORPORATION

8615 Usher Road, Cleveland, Ohio 44138-2103 USA

©2005 Vita-Mix Corporation. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopy, recording or any information storage and retrieval system without the written permission of the Vita-Mix Corporation.

ICE BIN EXTENSION KIT

Assembly Instructions For Extending The Portion Blending System® (PBS) Ice Bin



WARNING: To reduce the risk of injury, unplug the PBS unit before installing the Ice Bin Extension. Shaver and Blender Blades are sharp! Handle with caution to avoid injury.

NOTES: Actual components may differ slightly in appearance from those shown in these instructions. A maximum of two (2) Ice Bin Extensions can be used on a Vita-Mix Portion Blending System (PBS) (see Figure M). Not for use with any other manufacturers' equipment.

ICE BIN EXTENSION

1. Unplug the unit from its power source.
2. Remove the Ice Bin Lid (see Figure A) and remove all ice from the Ice Bin.
3. Place the Ice Bin Safety Shield (PLS546) onto the Ice Bin, as shown in Figure B. **NOTE:** The Safety Shield is configured with a small, box-shaped protrusion that must be fitted into the slot at the top of the Safety Switch Pushrod Channel located on the left-rear of the Ice Bin (see Figure C). When properly fitted, the Safety Shield will rest firmly on the Ice Bin with the Safety Shield alignment mark aligned with the corresponding mark on the front of the Ice Bin (see Figure D). **The PBS Unit will not operate unless the Safety Shield is properly fitted on the Ice Bin.**
4. The Ice Bin Extension (PLS547), shown in Figure E, is configured with positioning tabs of two different widths (see Figures F and G). Place the Bin Extension onto the Safety Shield, with the wide tab aligned with the front of the Ice Bin, as shown in Figure H. **NOTE:** The Bin Extension alignment mark must be positioned to align with the alignment mark on the front of the Ice Bin.
5. The Ice Bin Lid can also be placed directly onto the Safety Shield, as shown in Figure I. **NOTE:** The alignment mark on the Ice Bin Lid must be positioned to align with the alignment mark on the Ice Bin.

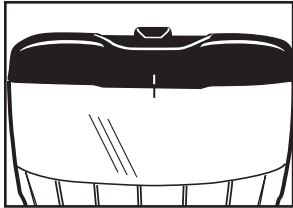


Fig. A. Ice Bin with Lid

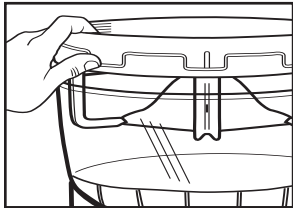


Fig. B. Align Safety Shield

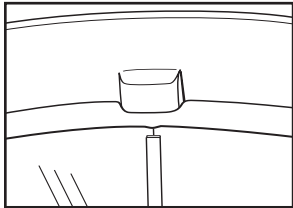


Fig. C. Align with Pushrod Channel

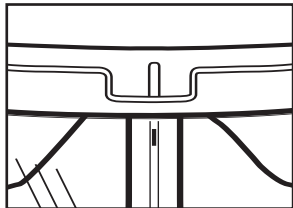


Fig. D. Alignment Marks

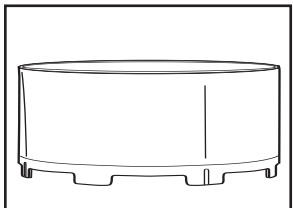


Fig. E. Ice Bin Extension

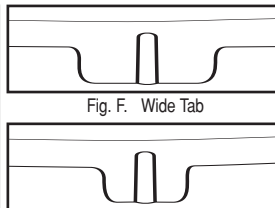


Fig. F. Wide Tab




Fig. G. Narrow Tab

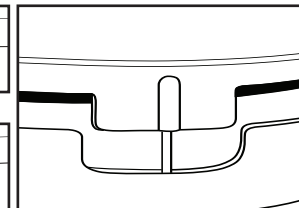


Fig. H. Position Bin Extension

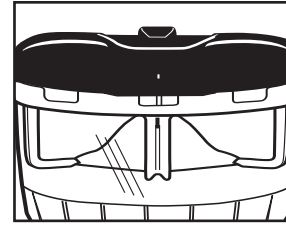


Fig. I. Ice Bin Lid on Safety Shield

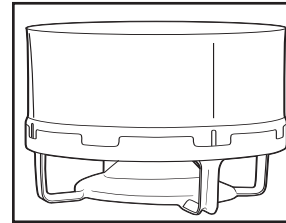


Fig. J. Properly aligned Extension

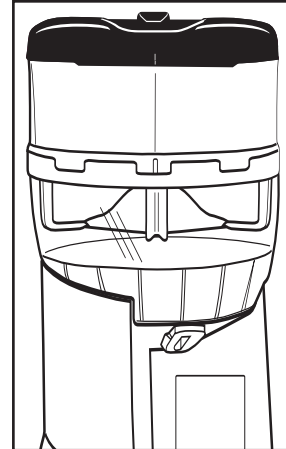


Fig. K. Properly aligned Extension

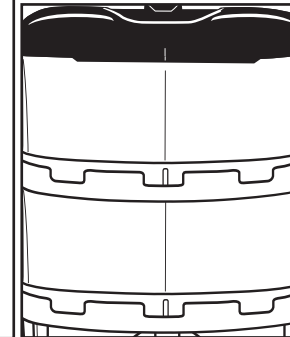


Fig. L. Properly Aligned Support Ring

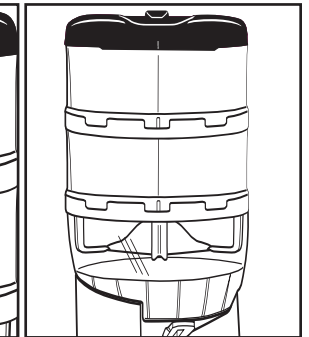


Fig. M. Two Ice Bin Extensions
(Requires Item #1576, sold separately)

6. When properly fitted, all of the tabs on the bottom of the Ice Bin Extension will fit firmly into the recesses in the Safety Shield, as shown in Figure J.
7. Replace the Ice Bin Lid, as shown in Figure K.

EXTRA EXTENSION (OPTIONAL)

1. An additional Extension can be safely added to the PBS if Item #1576 is purchased. The additional Extension kit includes the Support Ring (PLS548) which is to be placed onto the first Extension. (A second safety shield is not necessary.) Make sure that the alignment mark on the front of the Support Ring lines up with the alignment mark on the first Extensions (see Figure L).
2. With the Support Ring firmly in place, the second Extension can be placed on top of it. Make sure that the alignment marks on the front of the second Extension and Support Ring line up with the alignment marks on the first Extension and the Ice Bin (see Figure M).

NOTES:

- A maximum of two (2) Ice Bin Extensions can be used on the PBS. Use of more than 2 extensions voids the UL Listing of the unit and may render the unit unstable.
- Each Ice Bin Extension will add approximately 5 gallons / 19 Ltrs. of ice to ice bin capacity.